

 


MANUAL DE UTILIZADOR



Modelo MEI 190 XN

Apresentação do produto

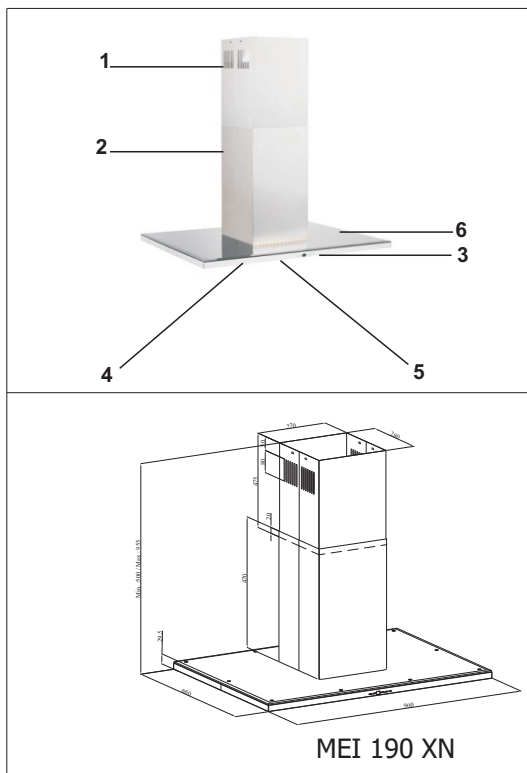

- 1 - Chaminé Exterior
- 2 - Chaminé Interior
- 3 - Painel de controlo
- 4 - Filtro de alumínio
- 5 - Iluminação
- 6 - Vidro temperado

AVISOS E PRECAUÇÕES DE SEGURANÇA

- * Este produto está destinado a uso doméstico.
- * O seu produto usa voltagem de 220-240V/50Hz
- * O fio terra é usado na ligação eléctrica do produto. Este cabo deve ser definitivamente ligado a uma tomada segura.
- * Todas as ligações devem ser feitas por um técnico qualificado.
- * Uma instalação feita por pessoas não autorizadas pode causar acidentes, danificar ou prejudicar a performance do produto.
- * Durante a montagem o cabo não deve estar sujeito a esmagamento. Nem estar perto do fogão, pode causar incêndio.
- * Não coloque na tomada antes de o instalar.
- * Deixe a tomada num local acessível, para que o possa desligar quando necessário.
- * Não toque nas lâmpadas podem estar quentes.
- * Se usar o exaustor para uso não doméstico podem ocorrer riscos e ficar fora da garantia.
- * Siga as instruções para a saída de ar.
- * Comidas flamejantes não devem ser usadas por debaixo do exaustor.
- * Ligue o produto depois de colocar a frigideira na placa. Caso contrário, a alta temperatura pode causar deformação no produto.
- * Não deixe óleo na placa. As frigideiras com óleo quente podem voltar a inflamar.
- * Preste atenção às cortinas e tampas durante a cozedura porque o óleo pode inflamar.
- * Certifique-se que os filtros são mudados convenientemente. Os filtros que não são mudados podem incinerar porque contêm gorduras.
- * Não coloque filtros que não estejam preparados para o calor.
- * Não opere o exaustor sem filtro de alumínio, não remova os filtros quando está ligado.
- * Em caso de chama, desligue o aparelho e os aparelhos de cocção.
- * O seu produto pode causar risco de incêndio se não o limpar periodicamente.
- * Desligue o produto antes de começar o processo de manutenção (desligue na tomada).
- * Quando a chaminé e os aparelhos de cocção usam outra energia que não a eléctrica ao mesmo tempo, a pressão negativa na sala não deve ser maior do que 4 Pa (4x10 bar)
- * Se houver outro aparelho a funcionar com combustível no mesmo local que o exaustor, este aparelho deve estar isolado do seu volume totalmente e o aparelho deve ser do tipo hermético.
- * Quando a conexão da chaminé for aplicada ao seu produto, use condutas de 150mm ou 120mm de diâmetro. Deve ser o mais curta possível e sem curvas.

* Mantenha a embalagem longe de crianças pois pode ser perigosa.

* Assegure-se que a criança não brinca com o produto.

* Se o cabo eléctrico está danificado, deve mudá-lo, por pessoal qualificado especialista para prevenir alguma situação perigosa.

* No caso de chama, desligue o aparelho e outros aparelhos de cocção. Cubra a chama. Nunca use água para o extinguir.

Use fusíveis com o MAX 6 A na instalação do produto para sua segurança.

Aviso sobre Transporte

* Todos os materiais usados na embalagem são passíveis de reciclagem.

* Por favor cumpra os sinais da embalagem durante o transporte.

* Segure nas laterias do produto para mover o produto.

Se precisar de transportar:

* Mantenha a caixa original.

* Transporte o produto na caixa original, cumpra com os sinais.

Se não houver embalagem original:

* Não ponha material pesado na chaminé.

* Mantenha a superfície exterior protegida.

* Embale os seus produtos para evitar danos.

Instalação, retire o produto da embalagem:

* Verifique que não existe nenhuma deformação no produto.

* Danos no transporte deve ser imediatamente reportados ao transportador.

* Se notar algum dano reporte ao vendedor.

* Não deixe as crianças brincarem com o material de embalar!!!

Acessórios Standard

Chaminé de plástico

Ligada à saída de ar do exaustor (Figura 1)

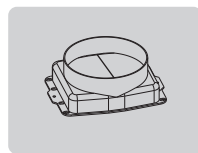 


Figure 1

Lugar do Produto:

Quando a montagem do exaustor estiver completa, deixe pelo menos 65cm entre o produto e a banca ou pelo menos 75cm se tiver placa de gás (Figura 2)

Electrich hobs 65 cm
Gas hobs 75 cm

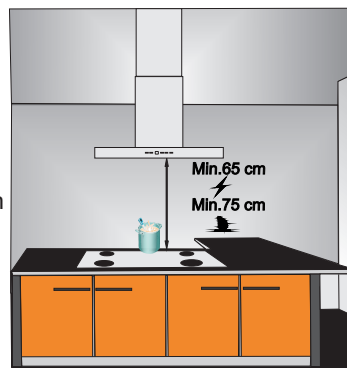 


Figura 2

Instalação, retire o produto da embalagem:

- * Verifique que não existe nenhuma deformação no produto.
- * Danos no transporte deve ser imediatamente reportados ao transportador.
- * Se notar algum dano reporte ao vendedor.
- * Não deixe as crianças brincarem com o material de embalar!!!

Instalação do Exaustor de Ilha

Siga as instruções

Instalação da chapa de conexão ao tecto:
A frente da chapa (Figura 3) e a frente do aparelho devem estar na mesma orientação.

- 1) Perfure buracos de 10mm desde A, B, C e D.
- 2) Coloque as borrachas de 10mm nos buracos A, B, C e D.
- 3) Fixe a chapa no tecto com os 4 parafusos (5,5x4,5). Figura 3.

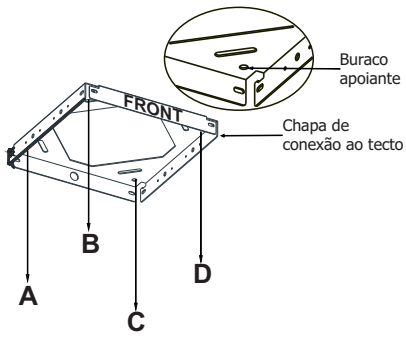 


Figura 3

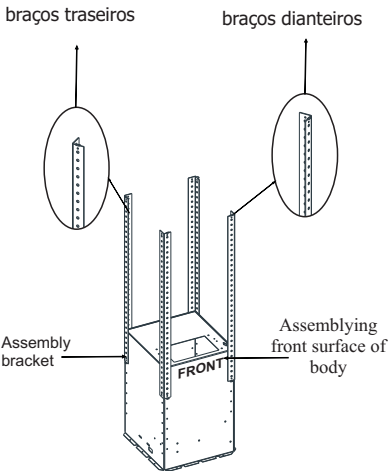 


Figura 4

Instalação dos braços

A parte frontal mostra onde está a frente do aparelho. Os braços têm parte esquerda e direita. Figura 4

Instalação da chaminé na cabine do motor:

Coloque a chaminé interna na chaminé externa. Monte a chaminé nos parafusos de ligação à cabine do motor. Figura 5


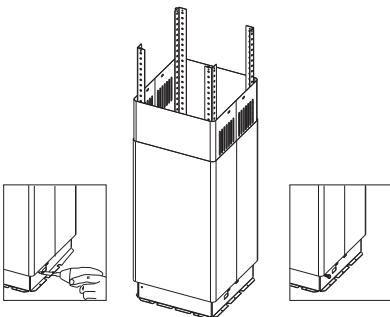 


Figura 5

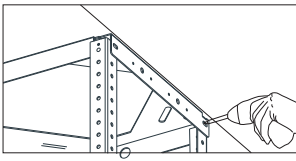 

Colocação da Cabine de Motor na barra apoiante

Coloque os braços na barra apoiante, aperte-os com parafusos 3,5x9,5. Figura 6

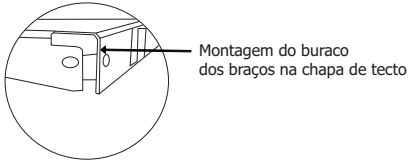 


Figura 6

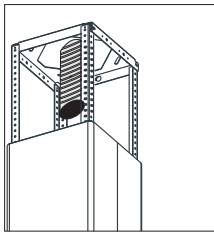 


Figura 7

Instalação do tubo flexível de alumínio

Conecte o tubo flexível de alumínio nas saídas de ar do produto. Verifique se não se soltam em funcionamento (Figura 7).

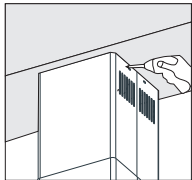 
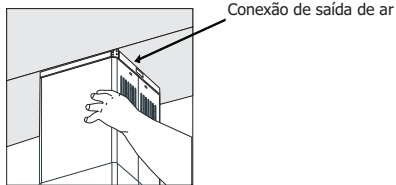 


Figura 8

Fixação da Chaminé Interna

Puxe a chaminé interna para cima, alinhe os buracos e fixe os parafusos de níquel 3,5x9,5 como na figura 8.

Remover a Placa de Extracção Perimetral

Para remover a placa de extracção perimetral, segure nos pontos extremos e puxe para baixo. Figura 9

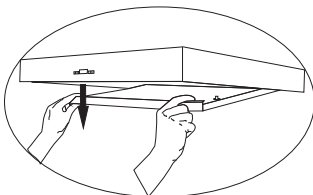 


Figura 9

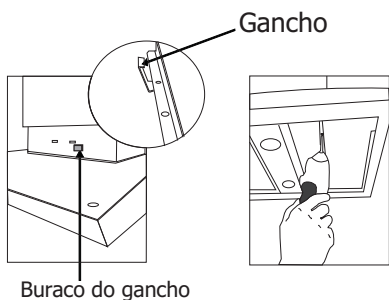 


Figura 10

Fixar a Cabine do Motor no Corpo
 Coloque dois ganchos no corpo e prenda a cabine do motor. Fixe-os juntamente com os parafusos 3,5x9,5. Figura 10

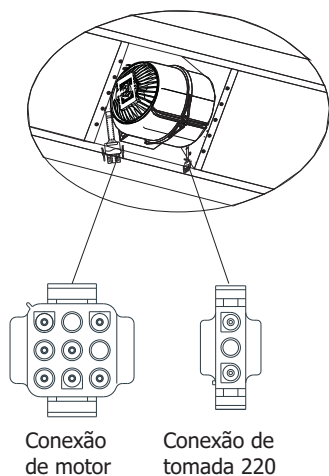 


Figura 11

Fazer conexões
 Conecte a tomada de 220V. Coloque os filtros de alumínio de seguida. Figura 11

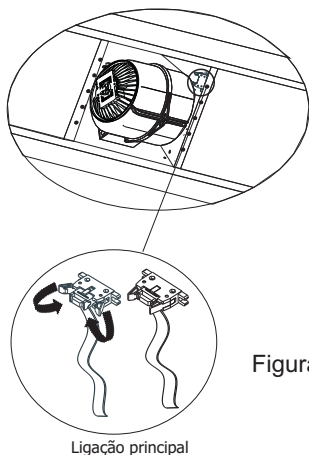 


Figura 11a

Após a montagem, faça as conexões como mostra a imagem para activar o painel de controlo.

Para ligar, primeiro abra as pinças. Feche-as no final da conexão. Figura 11a

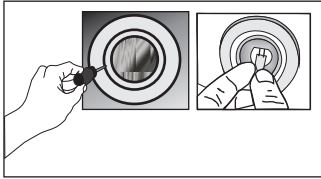 


Figura 12

Substituir Lâmpadas de Halogéneo de 20W
Retire a cobertura da lâmpada. Puxe para
baixo a lâmpada e substitua. Figura 13

Funções do Produto

O seu exaustor é compatível com ou sem chaminé.

O produto deve estar ligado a uma chaminé que vai levar o ar directamente para o exterior. Para uma melhor performance presta atenção à conducta de instalação que quanto mais curta melhor.

Atenção!!!

A saída de ar não deve estar ligada a outros canais de ar que possuam fumo também.

Substituir os Filtros de Carbono

Desligue o aparelho da tomada antes.

Os filtros de carbono devem ser mudados de cada 3-5 meses e devem ser usados em cozinhas sem ventilação.

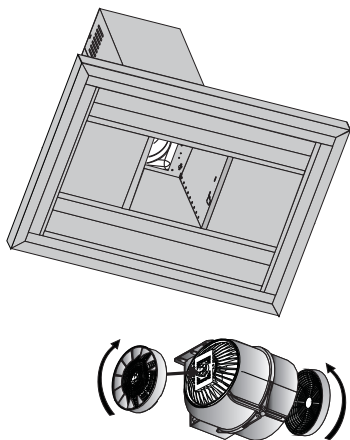 


Figura 13

Substituindo o Filtro de Carbono

É necessário instalar 2 filtros de carbono no seu produto.

Para colocá-lo, ponha-os no canal de ligação ao motor e gire-o no sentido do relógio. Para remover faça o inverso. Figura 13

Mudar os Filtros

Para mudar os filtros, puxe-o na sua direcção. Figura 14

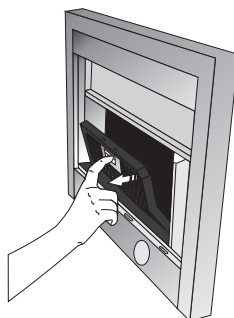 
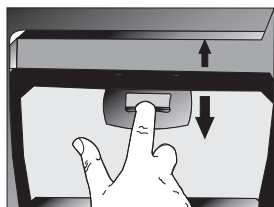 






Figura 14

Uso de Controlo Digital com 5 Velocidades

Remova a protecção que vem no inox após a instalação.

Pode seleccionar até 5 velocidades. Entre o 1,2,3,4,5 de acordo com a fritura. O Motor liga ao premir o botão  no painel frontal. A velocidade pode aumentar ao clicar no botão  e diminuir no botão . O Temporizador automático está disponível em modelos com controlo electrónico.

Quando o botão  é premido por mais de 2 segundos, o temporizador liga-se por 15 min. O motor para automaticamente após 15 min.





Iluminação

O produto tem 2 lâmpadas e um botão para controlar a luz. Pressione o botão para começar.

Quando carrega no botão de luz por 4 segundos, a iluminação LED aparecerá, quando repetir apagará.

Períodos de Limpeza dos Filtros de Alumínio:

Os filtros devem ser limpos quando o "C" aparecer no display de cada 2-3 semanas.

De forma ao "C" desaparecer, prima o botão  por mais de 3 segundos (quando o aparelho está na posição off). A letra "E" aparece no display e o produto irá operar de forma normal. Se quiser continuar a utilizar o produto sem eliminar a letra "C", quando pressiona o botão  a velocidade activa aparece por 1 segundo, então, o aviso "C" aparecerá uma vez e o motor continuará a operar.

NOTA: "C" vai aparecer após o uso do produto por 60 horas.

MANUTENÇÃO

* Desconecte a electricidade antes de fazer manutenção ou limpeza.

* Os filtros de alumínio têm pó e óleo.

* Os filtros de metal devem ser lavados uma vez por mês com água quente e se possível no lava-loiças (60°C).

 
* Retire os filtros de alumínio pressionando as travas elásticas na ponta. Após limpar, não substitua antes que seque.

* A superfície exterior do exaustor deve ser limpa com um pano húmido molhado com água ou álcool.

* Evite o contacto de água nas partes electrónicas.

* Use produtos de limpeza de inox disponíveis no mercado.

Aviso: Os filtros de alumínio podem ser lavados no lava-loiças. Após algumas lavagens pode mudar a sua cor. É normal, não tem de os trocar.

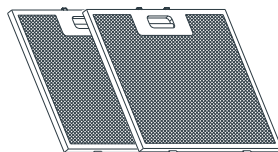

**Filtros de
alumínio laváveis**

Ventilação eficiente

Para assegurar uma correcta ventilação, mantenha a janela da cozinha fechada.

NOTA IMPORTANTE

Por favor tome atenção quando o produto opera em simultâneo com outro aparelho que usa ar ou combustível (por exemplo, aquecedor) porque o exaustor pode afectar negativamente ao extrair o ar.

Este aviso não é válido para uso sem chaminé.

	Verifique a ligação elétrica em cada rede elétrica deve estar entre 220-240 V, e deve estar ligado a terra)	Verifique a ligação do motor (Deve estar posicionado em On)	Verifique a ligação da lâmpada (Deve estar posicionada em On)	Verifique o filtro de alumínio (O filtro de alumínio deve ser lavado uma vez por mês)	Verifique as lâmpadas (As lâmpadas devem estar firmes)	Verifique a saída de ar	Verifique os filtros de carbono (Devem ser substituídos em cada 2/3 meses)
O exaustor não funciona	✓	✓					
A iluminação não funciona	✓		✓		✓		
A extracção do exaustor está fraca				✓		✓	✓
O exaustor não extrai o ar correctamente				✓			✓

Se o produto não funcionar:

Antes de contactar o serviço técnico:

Assegure-se que o produto está ligado à tomada e que os fusíveis estão a funcionar. Não tome nenhuma acção que possa danificar o produto. Antes de contactar o serviço técnico, verifique que o seu exaustor está de acordo com a Tabela 1. Se o problema persistir, contacte o fabricante ou um centro de assistência autorizado.

 
Para usar o seu exaustor eficientemente:

*Use conductos com 150/120mm de diâmetro e com menos curvaturas possíveis quando fizer a instalação.

*Preste atenção aos ciclos de limpeza e mudança dos filtros de alumínio.

*Use o produto a meia velocidade se não necessitar da extracção máxima.

*Para que a ventilação ocorra correctamente, as janelas da cozinha devem estar fechadas.

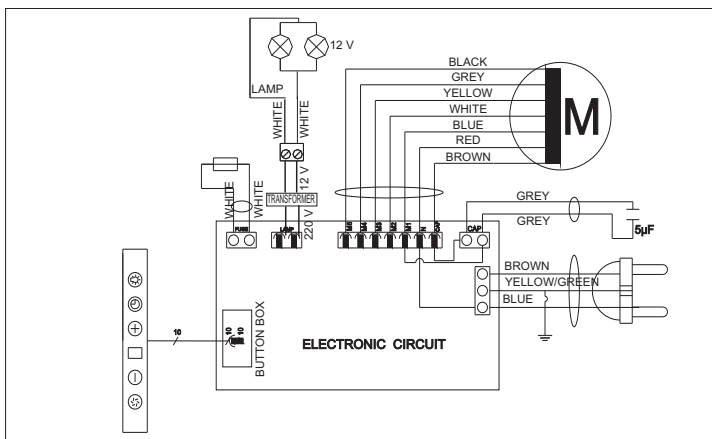

800m³/h 5 Velocidade - 12 V

ESPECIFICAÇÕES TÉCNICAS

Voltagem	220-240 V 50Hz
Classe Isoladora do Motor	F
Classe Isoladora	CLASS I



 
CHIMNEY HOOD (ISLAND)

INSTRUCTIONS MANUAL



MEI 190 XN

INTRODUCTION OF DEVICE

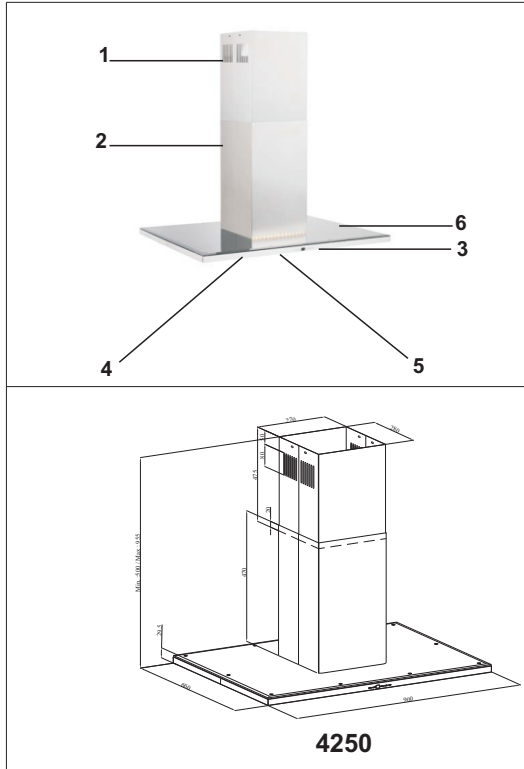

- 1) External Chimney
- 2) Internal Chimney
- 3) Control Panel
- 4) Aluminum Cassette Filter
- 5) Cooker Lighting
- 6) Tempered Glass

WARNINGS AND SAFETY PRECAUTIONS

- *This product is designed for usage at home.
- *Your products usage voltage is 220-240 Volts~50Hz
- *Grounded plug is used at your product's electric network cable. This cable should definitely be plugged in a grounded socket.
- *All electrical networks should be set by a qualified electrician.
- *Installation applied by unauthorized people may cause the product to operate at low performance, damage of the product and accidents.
- *Power supply cable should not be exposed to press or smash during montage. Network cordon should not be placed near the cookers; it may cause fire if it melts.
- *Do not plug into the socket before installation of the product is completed.
- *Keep the plug at a reachable place so that you can unplug it in case of any danger.
- *Do not touch the lamps when they are on for long time. Lamps may hurt your hand as they will be hot.
- *Kitchen cooker hoods are designed for usage during normal and home-style cooking. If it is used for other purposes, failure risk occurs and it will be out of warranty.
- *Follow applicable rules and directions for passing out outlet air. (This warning is not valid for usage without chimney.)
- *Flaming foods should not be cooked under the product.
- *Start your product after you put pot, fry-pan etc. on the hob. Otherwise high temperature may cause some parts of your product to get deformed.
- *Before you take pot, fry-pan etc. from the hob, put their lids on.
- *Do not leave hot oil on the hob. Pots that have hot oil in them may cause selfignition.
- *Pay attention to curtains and covers during cooking of meals like frying because oil may flare up.
- *Make sure that filters are changed in convenience. Filters that are not changed at appropriate time has risk of causing fire due to oil that will be gathered on them.
- *Do not use filter materials that are not flame resistant instead of filter.
- *Do not operate your product without aluminum filter; do not remove filters when the product is on.
- *In case of flame, cut power of the product and the cooking appliances. (Cut power of the product by plugging it off the socket).
- *Your product may cause fire risk if cleaning is not applied periodically.
- *Cut power of the product before maintenance process. (Cut power of the device by unplugging it)
- *When chimney hood and the appliances working with energy other than electricity are operated at the same time, negative pressure in the room should not be more than 4 Pa (4×10^{-5} bar)
- *If there is an appliance working with fuel or gaseous fuel at the same place with your hood, this appliance's exhaust should be isolated from its volume totally and the appliance should be hermetic type.
- *When chimney connection is applied to your product, use ducts of 150mm or 120mm diameter. Duct connection should be as short as possible and should include few bends.

*Keep package materials away from children as they may be dangerous for them.

*Be sure that your child does not play with the product. Do not allow kids to use your product.

*If power supply cable is damaged, this cable should be changed by its producer or its service agency or a personnel who is a specialist at the same level in order to prevent a dangerous situation.

*In case of flame, cut power of the cooker hood and the cooking appliances, cover the flame. Never use water in order to extinguish it.

Use "MAX 6 A" fuse at cooker hood installment for your security.

"CAUTION: Accessible parts may become hot when used with cooking appliances"

"The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction"

Warning about Transportation and Carriage

*All the materials used at package of your product are suitable for recycling.

*Please comply with the signs on the product's box during transportation.

*Hold the holders placed at sides of the box in order to carry your product.

If you need transportation;

*Keep the original box.

*Carry your product in its original box; comply with the carrying signs on the product's box.

If there is no original package;

*Do not put heavy material on the chimney hood.

*Keep the external surface from bash.

*Pack your product to avoid damages.

Installation, taking off your product from its package:

*Check if there is any deformation on your product.

*Transportation damages and failures should immediately be reported to the transportation responsible.

*If you notice any damage please report to the seller.

***Do not allow children to play with packing material!!!**

Standard Accessories

Plastic Outlet (Figure 1)

Plastic outlet mounted to air outlet of the cooker hood

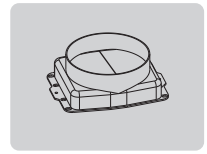 


Figure 1

Place of the Product:

After installation of your product, distance between range hood and electrical hob should be at least 65 cm and gas hobs at least 75cm. Figure 2

Electrich hobs 65 cm
Gas hobs 75 cm

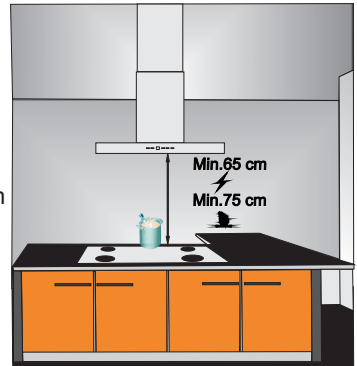 


Figure 2

Installation, taking off your product from its package:

*Check if there is any deformation on your product.

*Transportation damages and failures should immediately be reported to the transportation responsible.

*If you notice any damage please report to the seller.

***Do not allow children to play with packing material!!!!**

UNPACKING THE DEVICE:

Check your device for any deformation. Defects due to transportation must immediately be reported to the transportation agent. Faults detected must also be informed to the seller. Do not allow your children to play with the packing materials.

ISLAND HOOD ASSEMBLY

Please follow below instructions.

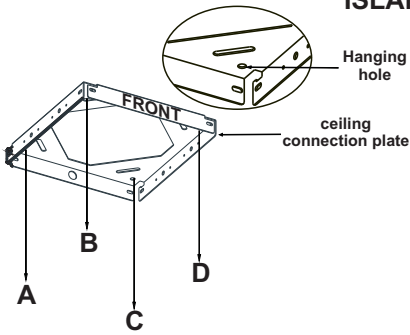 


Figure 3

Installation of ceiling connection plate : Front sticker (figure 3) on ceiling connection plate and control panel of chimney hood should have the same direction.

- 1)Drill 10mm holes from A,B,C,D points.
- 2)Drive 10mm wall plugs in to A,B,C,D holes.
- 3)Fix ceiling connection plate to ceiling by using 4 screws (5,5 x 45).Wall plugs,screws and celing connection plate are given with chimney hood. Picture 3

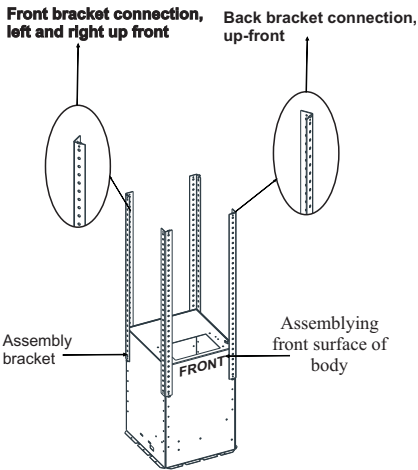 


Figure 4

Installation of cornerpieces:

Front sticker(picture 4) shows where front side of chimney hood should be installed.Front cornerpieces should be left and right directions.Back cornerpieces should be extroverted.Screw 4 cornerpieces to motor block.Hanging bar should have same directions with ceiling connection plate.Regulating the legth of chimney hood with these cornerpieces. Figure 4

Installation of chimneys to motor cabinet:

Please put internal chimney in external chimney.For temporary connection between chimneys please use a screw on motor cabinet.(So chimneys won't drop while you install motor cabinet to ceiling connection plate.)Mount the chimneys on this screw.(Screw holes of internal chimney should befit the side of motor cabinet.) Figure 5


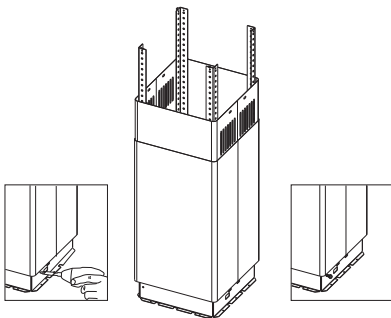 


Figure 5

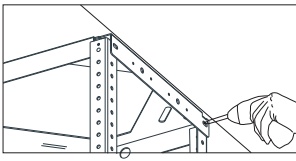 

Placing Motor Cabin to Hanging Bar

Place fixed hanging sticks on hanging bar through the channels. Fix parts together via 3,5x9,5 screws Figure 6

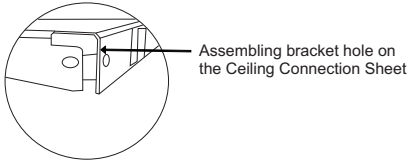 


Figure 6

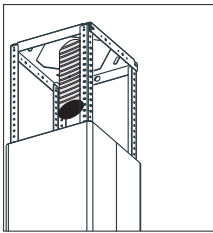 


Figure 7

Installing Aluminum Flexible Pipe

Connect aluminum flexible pipe to outlets on the product and kitchen wall. Ensure connection will not lose while your product is operated on maximum airflow level (Figure 7).

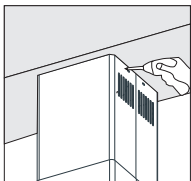 
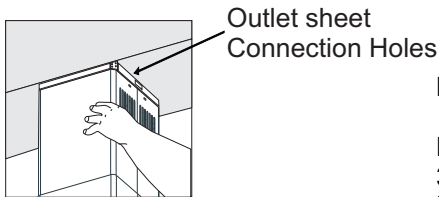 


Figure 8

Fixing Internal Chimney

Pull internal chimney up, align holes and fix by 3,5x9,5 nickel coated screws as shown in Figure 8.

Removing Split Extraction Plate

To remove split extraction plate, hold right and left top points and pull down. Figure 9

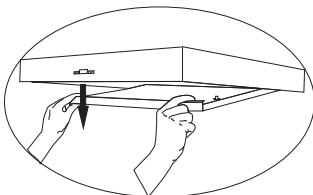 


Figure 9

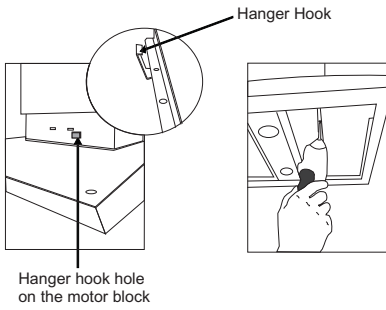 


Figure 10

Fixing Motor Cabin on Product Body

Place hanging hooks on product body onto channels on motor cabin. Fix them together with 3,5x9,5 screws Figure 10

Making Connections

Connect 220V power supply socket with corresponding motor socket. Place aluminum cassette filters when connections are done. Figure 11

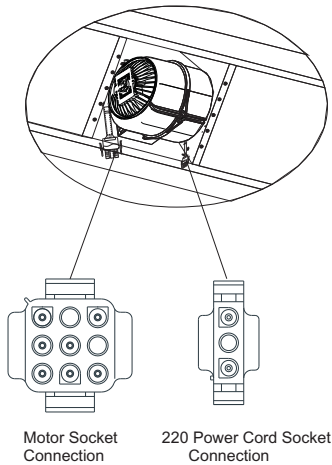 


Figure 11

Upon mounting, make connections as shown in Picture to activate use of control panel.

For connection, first set latches outwards. Latches shall be locked once connection is made. Figure 11a

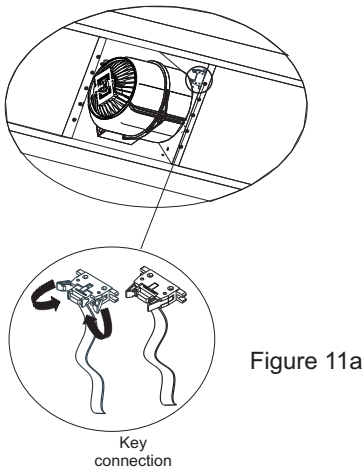 


Figure 11a

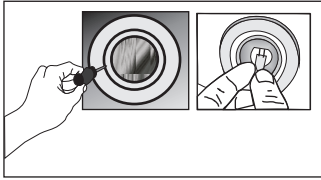 


Figure 12

Replacing 20W Halogen Lamps

Take off the glass cover on the lamp with a substance that will not scratch surface of the product as shown on the figure. Take off the faulty lamp pulling it downwards and replace it with a new one. Figure 12

Note: Do not hold the new lamp with naked hand, sweat or wetness of your hand will cause the lamp to fail because of the heat that will occur when the lamp is on.

Functions of the Product

Your hood is compatible for use with our without chimney.

Usage with chimney

The product should be connected to a chimney that will direct the air out during usage with chimney. In order to achieve best performance, pay attention that the duct system follows the shortest way for connection to the chimney. Your product is produced as it will be appropriate for usage with chimney.

Attention!!!

Outlet of the product should not be connected to air canals that have other smoke as well.

Replacing Carbon Filters

Unplug product's power cord before changing carbon filter.

Carbon filters should be replaced in every 3-5 months as product is operated in kitchens with no air outlet.

You should use oil (aluminum cassette) filter all the times with our without carbon filter.

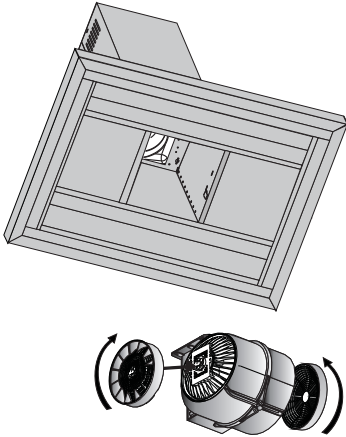 


Figure 13

Replacing Carbon Filter

It is necessary to install 2 carbon filters to your product.

To place the carbon filter, place your filter on connection channels on motor and turn it clockwise.

In order to remove filter, turn it anti-clockwise.

Figure 13

Changing Aluminum Cassette Carbon Filter

In order to take the carbon filter off, pull it towards yourself holding the upper latch. Figure 14

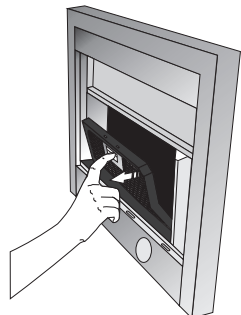 
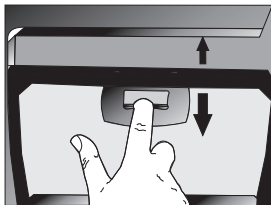 






Figure 14

Usage of 5 Speed Digital Control

Usage

Remove protective folio on the inox product after installation.



Speed Selection The product has 5 speeds of ventilation level. One of 1,2,3,4,5 speeds is selected in accordance with steam of cooking or fry. Motor is started pressing  control button on the front panel. Speed is increased pressing  button, and decreased by pressing  button. Automatic timer (TIMER) is available at the models with electronic remote control. When you press  button more than 2 seconds, timer function will be on for 15 minutes. When the timer is on, Display will signal and the motor will be off automatically 15 minutes later. Please use the cooker and the product at the same time to enable circulation. Doing so, air suction power will be affected positively. We recommend you to operate your product for few minutes more after the cooking is completed to enable absorption rest of smell and steam.



Illumination

Please use the illumination button on the control panel to command the lights ..

Cleaning Periods of the Aluminum Filters:

Filters should be cleaned when C signal appears on Display or (according to usage) each 2-3 weeks. In order to remove C signal, after the filters are cleaned and replaced to their place, press  button more than 3 seconds (when the product is at off position). Letter "E" will appear on Display and the product will operate as normal. If you would like to continue using the product without deleting C signal, when you press the  button active speed will appear for 1 second, then C signal will appear once more and the motor will continue operating.

NOTE: C signal will appear after usage of the product for 60 hours.

MAINTENANCE

*Disconnect electricity connection before maintenance and cleaning process.

*Aluminum cassette filter holds the dust and the oil in the air.

*Metal filter should be washed once in a month with hot and soaped water or, if possible, at dishwasher (60C).

*Take off aluminum cassette filter pressing on springy latches on end point. After cleaning, do not replace before it dries.

*Outer surface of the cooker hood should be wiped with a wet cloth that is wetted with water or alcohol.

*Please avoid contact of electronic parts with water or similar materials.

*Using Inox cleaning and maintenance products available in the market will help your product to perform longer.

Warning: Aluminum filters may be washed in the dishwasher. Color of aluminum filters may change after several washings. This is normal and it is not necessary to change the filters.

 
Efficient Ventilation

In order to ensure correct ventilation, keep your kitchen windows closed.

IMPORTANT NOTE

Please pay attention when the product is operated at the same time with a product which operates using air and fuel (for instance; heater, water heater etc. which operates using gas, diesel fuel, coal or wood), since cooker hood may affect burning negatively as it directs the air out.

This warning is not valid for usage without chimney.

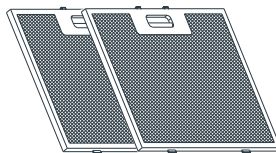

**Washable Aluminum
Cassette Filter**

	Check electric connection(Voltage of the electric network should be between 220-240V, cooker hood should be connected to grounded)	Check motor switch (Motor switch should be at on position)	Check motor switch (Motor switch should be at on position)	Check aluminum filter(Aluminum Cassette Filter should be washed once a month at normal conditions.)	Check lamps(Lamps should be firm.)	Check outlet (Outlet should be open)	Check Carbon Filter (Carbon filter should be replaced with a new one each 2,3 months at the models with Carbon Filter at normal conditions)
Cooker-hood does not work	✓	✓					
Illumination Lamp does not work	✓		✓		✓		
Cooker-hoods air suction is weak				✓		✓	✓
Cooker-hood does not direct air out (at places without chimney)				✓			✓

 
If the product does not work:

Before you contact the technical service:

Make sure that the product is plugged in and the electric fuse of the electric wiring is running. Do not take any action that will damage the product. Before you contact with technical service, check your cooker hood according to Table 1. If the problem goes on, contact the seller or the most authorized service.

In order to use the cooker hood efficiently:

- *Use ducts of 150/120mm diameter and as few bends as possible when you make the chimney connection.
- *Pay attention to aluminum filters' cleaning periods and changing periods of carbon filters.
- *Use the product at middle speed if high suction power is not necessary.
- * In order to ensure that ventilation occurs correctly, windows of the kitchen should be kept

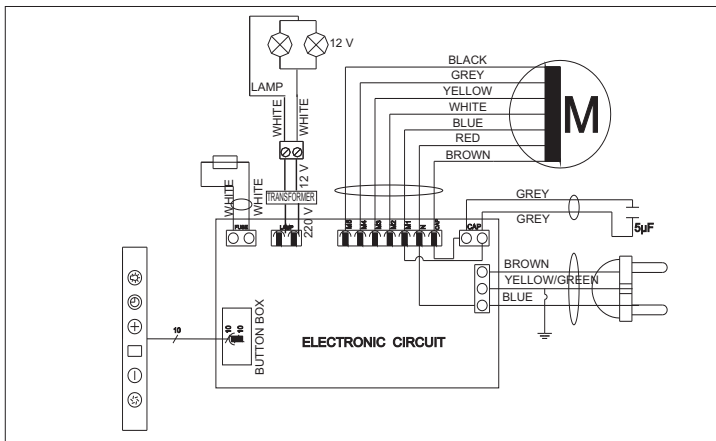

800m³/h 5 Speed - 12 V

TECHNICAL SPECIFICATIONS

Feeding Voltage	220-240 V 50Hz
Motor Isolation Class	F
Isolation Class	CLASS I