




User Manual KITS


ES CA DE GB FR PT NL GR TR PL HU RU UA SK CZ RO BG AR

www.teka.com


1

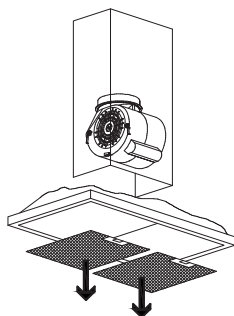


2



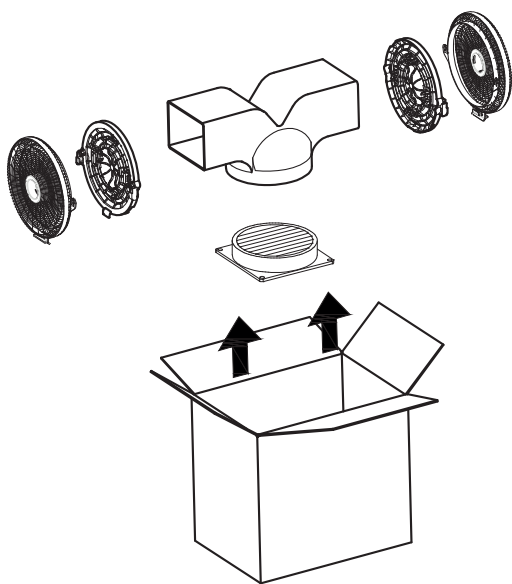


(A)		2x	✓
(B)		1x	✓
(C)		2x	✓
(D)		1x	✓
(E)		4x	✓
(F)		4x	✓

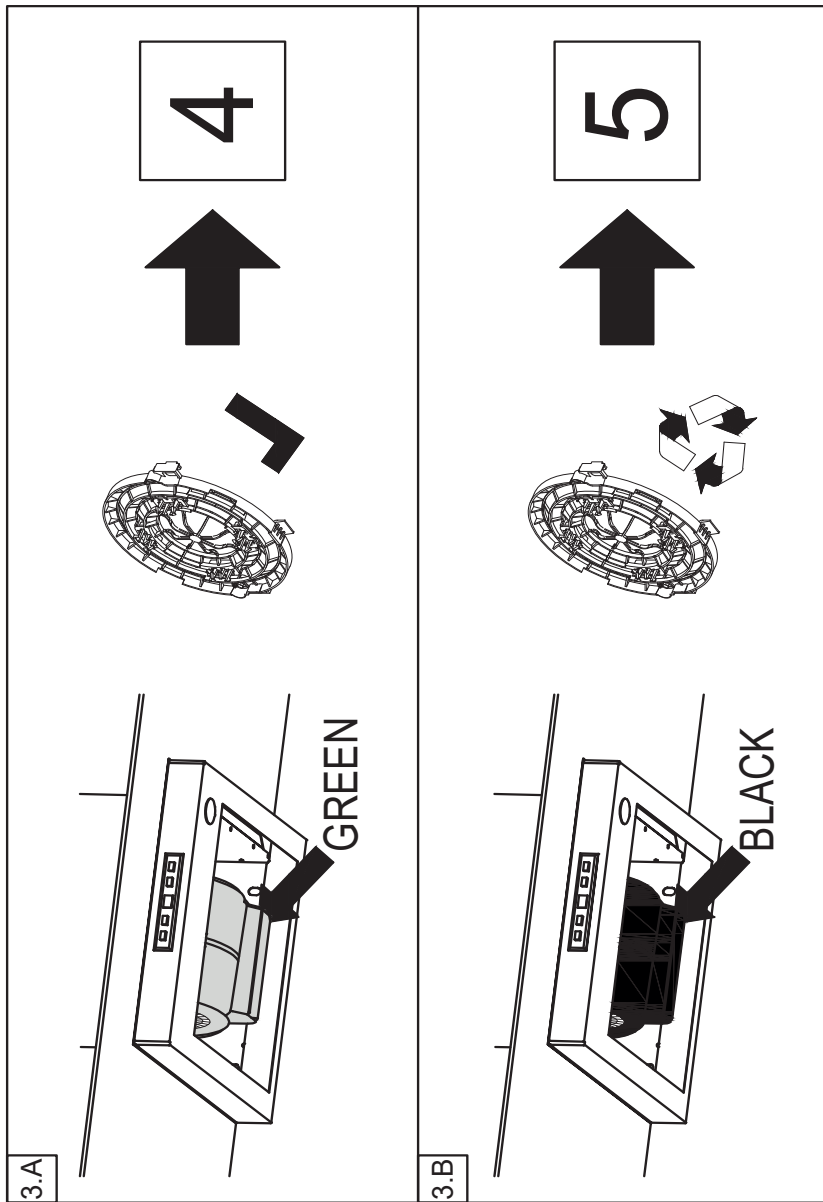


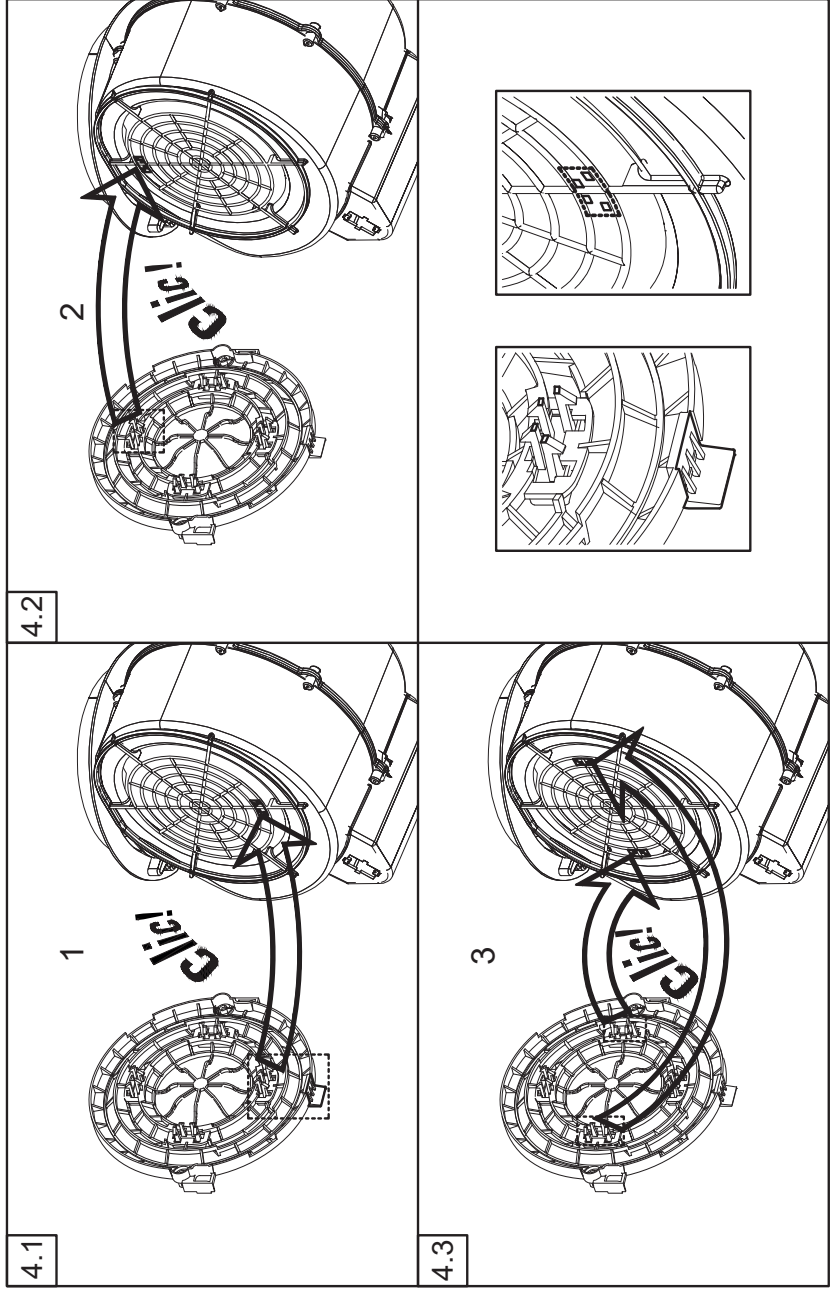


4.5

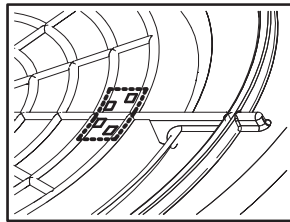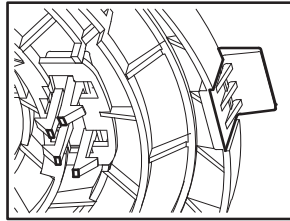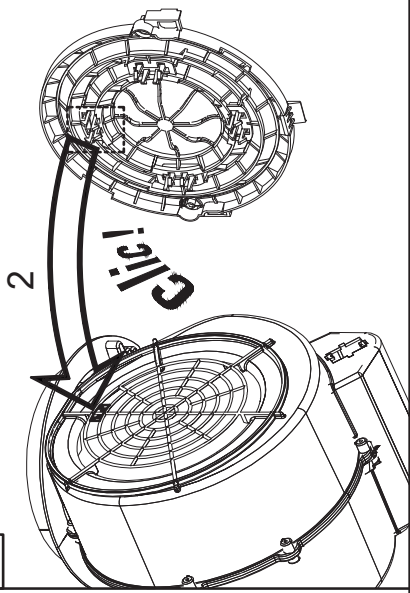


4.4

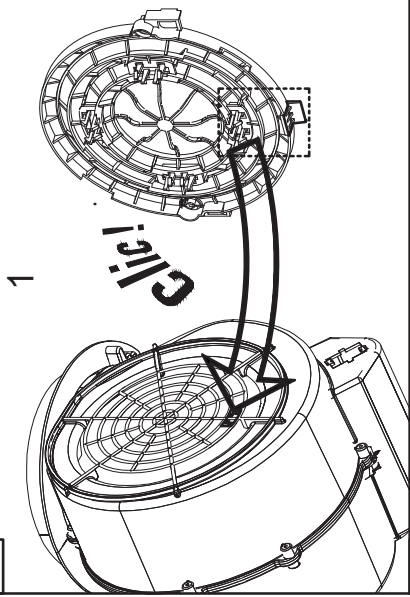





4.6

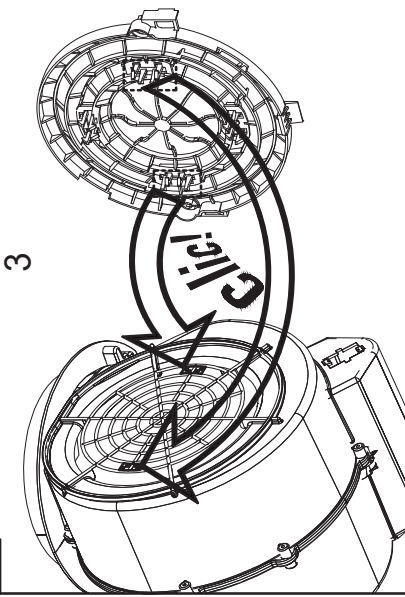


5.1

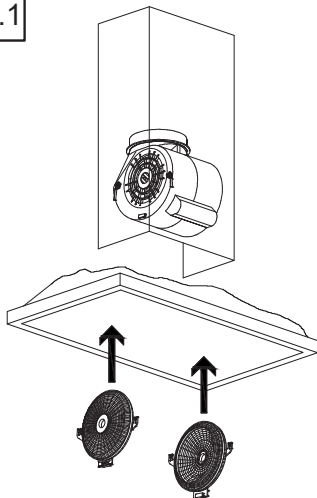

5.2

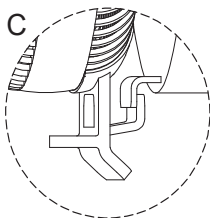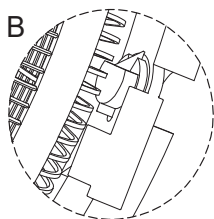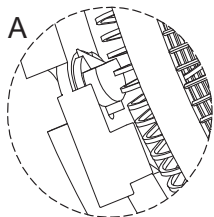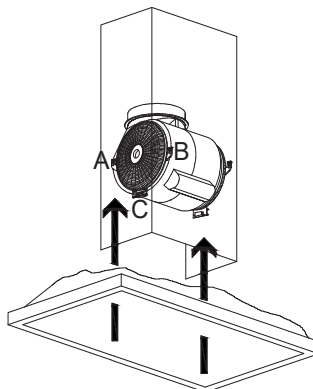


5.3

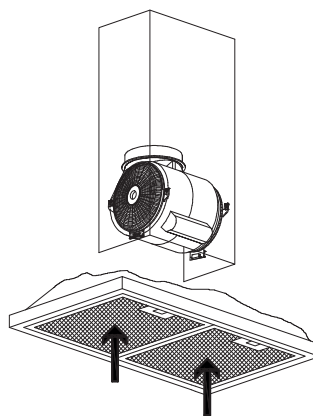


6.a


6.1.a

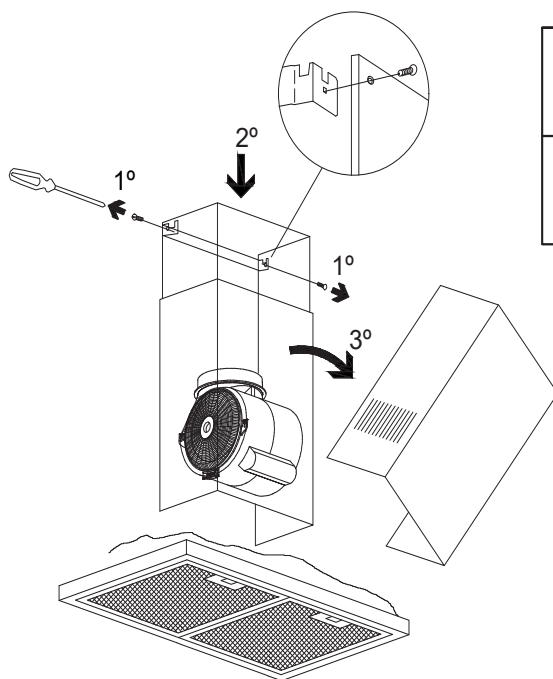


6.2.a

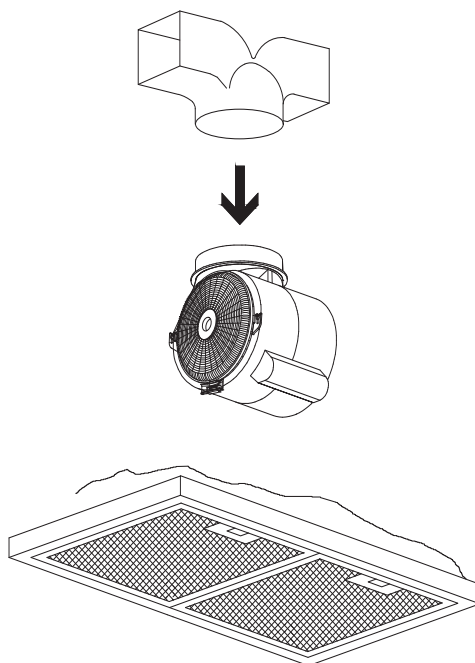

6.3.a

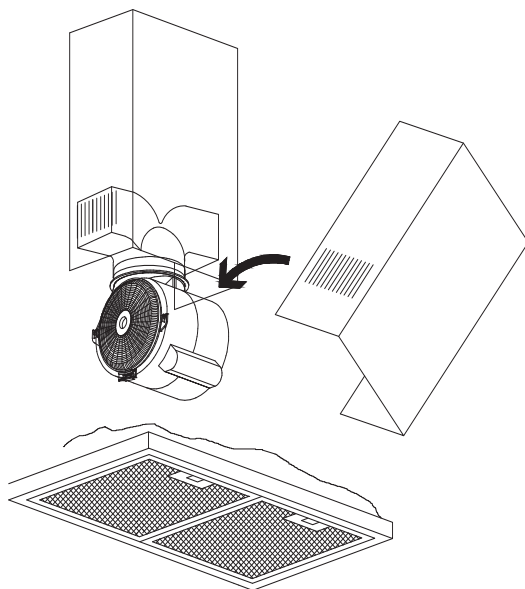


6.4.a

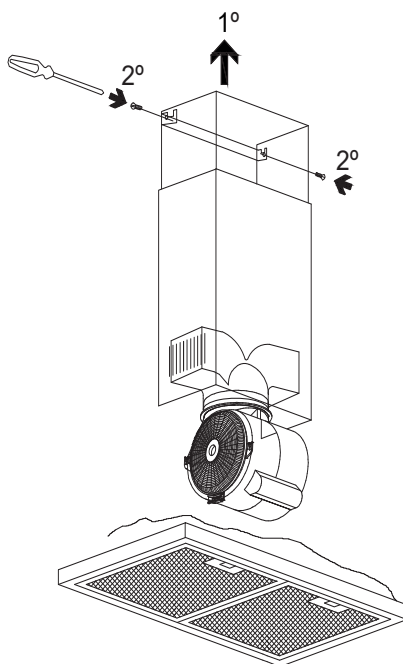


6.b


6.1.b

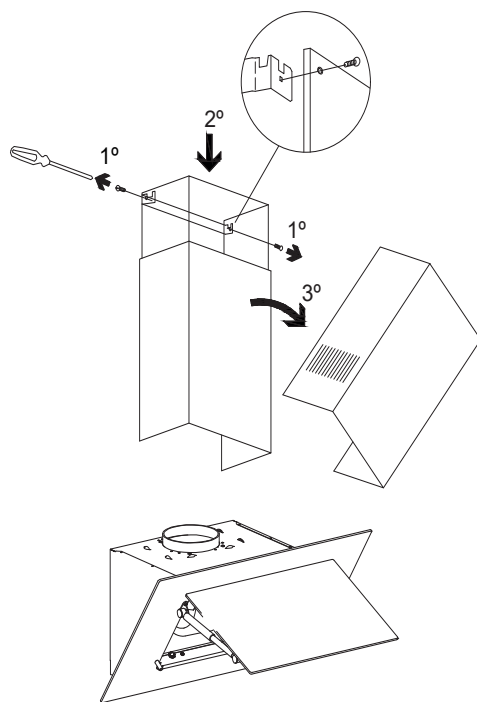


6.2.b

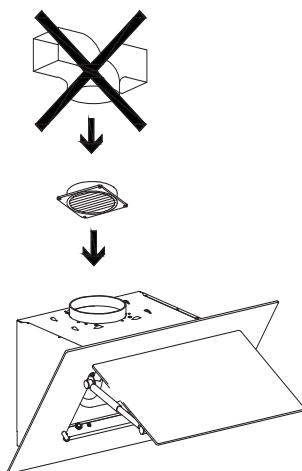

6.3.b

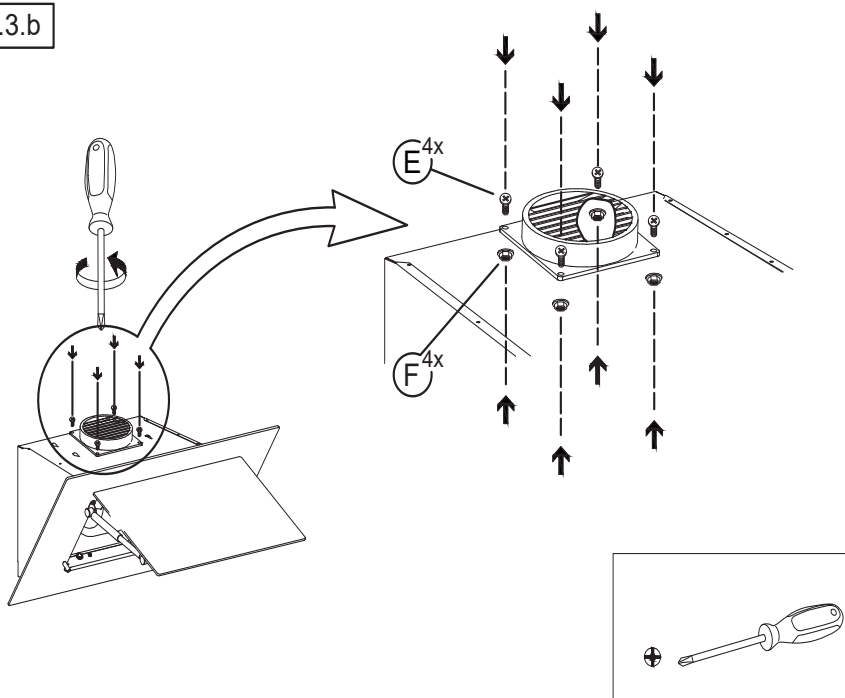

6.4.b

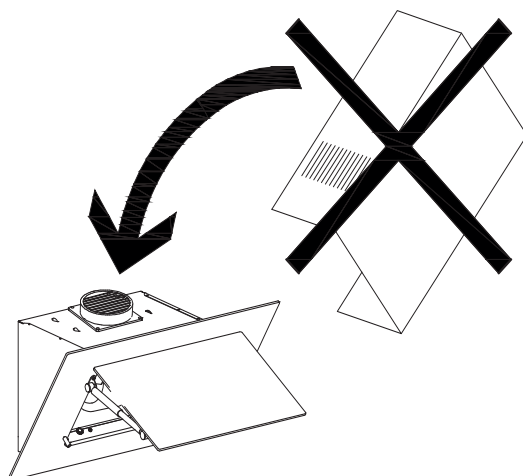



TEKA



www.teka.com



X0309024
REV.02